

Economiser Torch Handle with Pilot Flame Control

Propane

Part No: SHP02-OM

1. Ensure all connections are secure by tightening with a spanners and do not use if any leaks are found. Two spanners must be used when fitting the hose connection to the handle inlet.
2. Always use in a well-ventilated area.
3. Maintenance – Replace after 5 years in service, only use original spare parts.

Note: Only trained operators may use this equipment

Flame & Pilot Adjustment

Torch Adjustment

1. Check that the main control valve is in the off position by turning clockwise.
2. Turn on the gas supply. Set the pressure to suit each burner – 150 to 400 kPa. Burner pressures are stated on each burner.
3. Turn the main control valve to the on position and ignite the emitting gas at the burner.

Pilot Adjustment

1. Insert screwdriver into the pilot flame adjustment screw and turn clockwise to decrease the pilot flame and anti-clockwise to increase the pilot flame.
2. Press the economiser lever for a full working flame, release for pilot flame operation.

Note: You can not get a flashback with this equipment – Always check for leaks before lighting.

