

Mini Regulator for LpG (Air LpG / Propane use only)

Instructions

1. Connect mini regulator to the LpG/Propane cylinder by hand and tighten with a spanner.
 2. Adjust the control knob towards the minus "-" symbol (anti clockwise) so no pressure in on the internal spring.
 3. Turn on the LpG cylinder and check for leaks between the cylinder valve and the mini regulator inlet connection.
 4. Check for leak at the mini regulator outlet.
- Note: No gas will flow until the control knob is adjusted towards the plus "+" symbol (clockwise).*
5. Attach the hose set to the mini regulator outlet with a spanner
 6. Attach the handle to the other end of hose set.
Ensure the handle valve is closed and attach the burner required.
 7. Adjust the mini regulator control knob towards the plus "+" symbol (clockwise) to open the gas flow (about 4 turns so as gas can flow into the system).
This will pressurize the system and check for leaks before lighting.
 8. If leaks are found, replace before lighting the burner or use of the equipment.
 9. The mini regulator can be adjusted from 0 to 400kPa and has a maximum flow rate of 6 kg/h when fully adjusted toward to the plus "+" symbol (clockwise)
 10. Adjustment the control knob to suit the application/flame required.
 11. Ensure the equipment is turned off when not in use and depressurize the system.
 12. Always turn the cylinder valve off and safely release the pressure in the mini regulator system when not in use.
 13. Always use in a well-ventilated area.
 14. Maintenance – Replace after 5 years in service, only use original spare parts.

Note: Only trained operators may use this equipment

